



Woodward
7-in-1 Turntable Music Center with
AudioStream™

RHRP-3000



Instruction Manual

Please read carefully before use and keep for future reference.

WARNING



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Important Safety Instructions

1. Read these instructions- All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions-The safety and operating instructions should be retained for future reference.
3. Heed all warnings- All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions- All operating and use instructions should be followed.
5. Do not use this apparatus near water-The appliance should not be used near water or moisture-for example, in a wet basement or near a swimming pool.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched-particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments or accessories specified by the manufacturer.

11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



12. Unplug the apparatus during lighting storms or when unused for long periods of time.

13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when a power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, the device does not operate normally, or the device has been dropped.

14. If the plug is used as a disconnect device, the disconnect device must stay easily operable.

15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the device.

16. Use the equipment only in moderate climates.

17. The ventilation should not be impeded. Do not cover the ventilation openings with items, such as newspapers, tablecloths, or curtains.

18. Do not place open flame sources, such as lighted candles, on the apparatus.

19. The symbol with ~ indicates AC voltage.

20. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

FEATURES

- **3-SPEED TURNTABLE** – Enjoy your favorite records with a turntable that supports all three speeds: 33-1/3, 45, and 78 RPM.
- **AUDIOSTREAM™ FUNCTION** – (Bluetooth Out) Lets you wirelessly stream audio from this system to external Bluetooth speakers, earphones, headphones. In other words, AUDIOSTREAM™ is our branded name for the Bluetooth output feature. This is different from the Bluetooth® input function, which lets you play music from your smart device to this system. Thus, this device allows you to both wirelessly stream music into (i.e., Bluetooth In) or out of (i.e., Bluetooth Out) the device for your enjoyment.
- **BLUETOOTH®** – Stream music wirelessly from your smart device with Bluetooth connection.
- **BUILT IN STEREO SPEAKERS** – Built in Stereo Speakers provides for an enjoyable playback experience with no other connections necessary. Plug this unit into the wall and you are ready to enjoy all the features.
- **USB RECORDING** – Digitally preserve your vinyl records and auxiliary input audio by recording directly to a USB drive.
- **MULTI-SOURCE PLAYBACK** – Enjoy music from multiple sources including FM radio, USB MP3 playback, and auxiliary input for external devices.
- **COMPLETE ALL-IN-ONE SYSTEM** – Features built-in stereo speakers, included 45 RPM adapter, headphone jack for private listening, and RCA outputs for larger sound systems.

IN THE BOX

- Woodward
- 45 RPM Adapter
- ETL Power Adapter
- Felt Slipmat
- User Manual
- Warranty Card
- Review Card

SPECIFICATIONS

Turntable Speed: 33 $\frac{1}{3}$ / 45 / 78 RPM

Bluetooth® Version: 5.1

AudioStream™: Wirelessly stream music from device to external Bluetooth® speakers.

Speaker Output: 2 x 1.5W

FM Frequency: 88-108 MHz

Input: Bluetooth In, USB, 3.5mm Aux

 
 
 
 
Output: Bluetooth Out, RCA Line Out, 3.5mm Headphone Jack

Playable Media: MP3, WMA

Power Source: AC 100-240V, 12V 1A

CONTROLS

- 1) VOLUME KNOB
- 2) STANDBY INDICATOR
- 3) PHONO INDICATOR
- 4) USB INDICATOR
- 5) DIAL SCALE
- 6) BT IN/OUT INDICATOR
- 7) AUX INDICATOR
- 8) FM INDICATOR
- 9) TUNING KNOB
- 10) USB SLOT
- 11) STANDBY
- 12) MODE
- 13) SKIP DOWN
- 14) SKIP UP BUTTON
- 15) PLAY/PAUSE
- 16) STOP
- 17) + 10
- 18) REP/REC
- 19) EARPHONE JACK
- 20) AUX IN JACK
- 21) EXTERNAL POWER ADAPTOR JACK
- 22) LINE OUT JACK
- 23) LINE OUT JACK
- 24) SPEAKER
- 25) 45 RPM ADAPTOR
- 26) LIFT LEVER (FOR RECORD PLAY / PAUSE)
- 27) AUTO STOP ON/OFF BUTTON
- 28) 33/45/78 RPM SPEED SELECTOR
- 29) TONE ARM

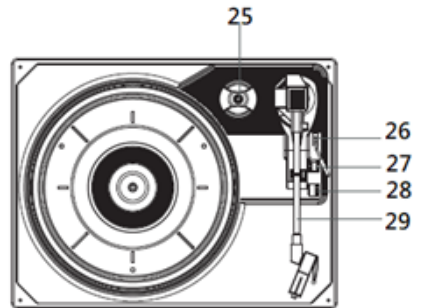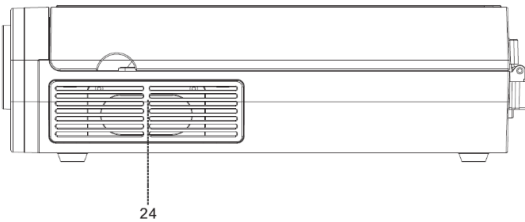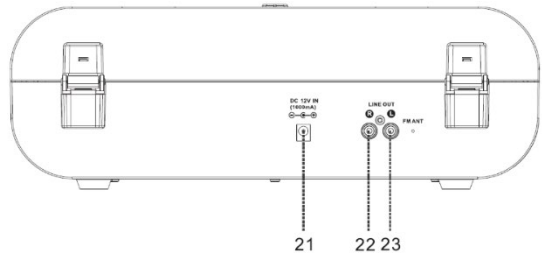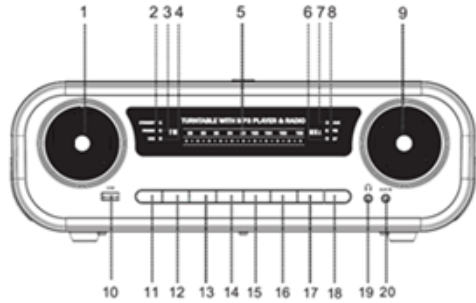

GETTING STARTED

Caution:

Use of controls, adjustments, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

This unit contains no user-serviceable parts.

Do not attempt to adjust or repair this unit yourself. Servicing must be performed by qualified service personnel only.

PRECAUTIONS FOR USE

Installation:

- Carefully unpack all parts and remove all protective packaging materials before operating the unit.
- Before connecting the unit to a power outlet, verify that the voltage indicated on the rating label corresponds to your local mains supply.
- Do not connect the unit to the mains power supply until all other connections have been properly made.
- Do not block or cover any ventilation openings. Install the unit in accordance with the manufacturer's instructions.
- Allow at least 4 inches (10 cm) of free space around the unit to ensure adequate ventilation.
- Do not install the unit near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Place the unit on a stable, level surface to prevent tipping or vibration.

Connecting the Power

1. Plug the power adapter into the DC IN jack on the back of the unit.
2. Plug the other end into a wall outlet.
3. Press the Standby/Power button to turn the unit on.
4. If the standby indicator light turns off, the unit is powered on.
5. If the standby indicator light is on, the unit is in standby mode.

LISTENING TO FM RADIO

To Tune to an FM Station

1. Press the Mode button repeatedly until FM mode is selected.
 - The FM indicator light will turn on.
2. Turn the Tuning knob to find your desired radio station.
 - The current frequency will appear on the dial scale.
3. Turn the Volume knob to adjust the sound level.

Tips for Better Reception

 
- The unit has a built-in FM wire antenna located at the back of the cabinet.
- Fully extend and straighten the wire for the best reception.
- Move the antenna to different positions if the signal is weak.

OPERATIONS

Playing Records (Phono Mode)


Before You Start

- Remove the stylus (needle) protector.
- Make sure the tone arm is released from the tone arm rest before playing.
- Secure the tone arm back on the rest after use.

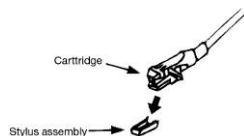

To Play a Record

 1. Press the Mode button repeatedly until Phono mode is selected.
 - The Phono indicator light will turn on.
2. Set the Speed Selector to the correct speed (33 / 45 / 78 RPM), depending on your record.
3. Place the record on the platter.
 - Use the included 45 RPM adapter if needed.
4. Raise the Lift Lever to lift the tone arm.
5. Gently move the tone arm over the record.
 - The platter will begin rotating.
6. Lower the lift lever slowly to place the stylus onto the record.
 - Playback will begin.
7. Adjust the Volume to your desired level.

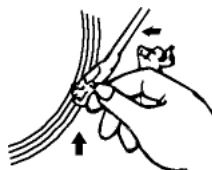

To Pause Playback

- Raise the lift lever to lift the tone arm.
- The platter will continue rotating.
- Lower the lift lever again to resume playback.

To Stop Playback

Automatic Stop: At the end of the record, the platter will stop automatically.

- Raise the lift lever.
- Return the tone arm to the tone arm rest.
- Lower the lift lever to secure it.

Manual Stop

To stop before the record ends:

- Raise the lift lever.
- Move the tone arm back to the tone arm rest.
- Lower the lift lever.

About the Auto-Stop Feature

Some records may stop before the last track finishes. If this happens:

- Set the Auto-Stop switch to OFF.
- The record will now play to the very end, but the platter will not stop automatically.
- When finished, press the Standby/Power button or switch the Auto-Stop back to ON.
- Return the tone arm to the rest.

OPERATIONS

Recording from Vinyl to USB (Phono Encoding)

You can record your vinyl records directly to a USB flash drive as MP3 files.

Before Recording

1. Insert a USB flash drive into the USB port.
2. Press the Standby/Power button to turn on the unit.
3. Select Phono mode.

To Start Recording

1. Press the REC button. The Phono indicator will begin flashing.
2. Start playing the record. Recording will begin in real time.

To Stop Recording

1. Press the REC button again.
2. The unit will switch to USB mode.
3. The recorded track will begin playing automatically.

Recording Notes

- Recording is done in real time (1:1 with playback).
- Files are saved in MP3 format at 128 kbps.
- Do not remove the USB drive during recording.
- Removing the USB drive while recording may damage the file.

Using AUX IN

AUX mode allows you to play music from an external audio device (such as a CD player, smartphone, or MP3 player) through this system.

To Play Music Through AUX IN

1. Press the Mode button repeatedly until AUX mode is selected.
 - The AUX indicator light will turn on.
1. Connect your external audio device to the AUX IN jack using a 3.5mm audio cable.
2. Start playback on your external device.
3. Adjust the volume on both the external device and the Music Center as needed.
 - The sound from your external device will now play through the system speakers.

Recording from AUX to USB (AUX Encoding)

You can record audio from an external device directly to a USB flash drive.

Before Recording

1. Insert a USB flash drive into the USB port.
2. Press the Standby/Power button to turn on the unit.
3. Select AUX mode.
4. Connect your external audio device to the AUX IN jack.

To Start Recording

1. Press the REC button.
2. The AUX indicator will begin flashing.
3. Start playback on your external device.
4. Recording will begin in real time.

OPERATION

To Stop Recording

- Press the **Stop** button to stop recording.
- Press the **Play/Pause** button to resume recording.
- Press the **Stop** button to stop recording automatically.

Recording

- Recording is done in real time (1:1 with playback).
- Files are saved in MP3 format at 128 kbps.
- Do not remove the USB drive during recording.
- Removing the USB drive during recording may damage the file.

Playing MP3 Songs from USB Storage

Connecting Your USB Device

- Insert the USB plug into the USB port with the correct orientation (face up).
 - Make sure to insert it straight without bending.
- Do not insert the USB upside down or backwards, as this may damage the system or USB device.
- Press the Mode button repeatedly until USB mode is selected.
 - The USB indicator light will turn on once USB mode is active.
- Insert your USB memory device.

Playback Controls

Play / Pause

- Press the Play/Pause button once to pause playback.
- Press it again to resume playing.

Stop

- Press the Stop button to end playback.

Skip Up / Skip Down

- During playback, press the Skip Up button once to play the next track.
- Press and hold the Skip Up button to fast forward through tracks continuously.
- Press the Skip Down button once to play the previous track.
- Press and hold the Skip Down button to rewind continuously.

+10 MP3 Quick Search

- Press the +10 button to skip ahead by 10 tracks for faster browsing.

Repeat Function

- During USB playback, press the Repeat (REP) button once.
- The USB indicator will flash slowly, and the current track will repeat continuously.
- Press the Repeat (REP) button again.
- The USB indicator will flash rapidly, and all tracks on the USB device will repeat continuously.

OPERATION

Important Notes About USB Devices

- If you connect an MP3 player to the USB port, some devices may not play properly due to differences in file format or encoding methods. This is not a malfunction of the unit.
- USB devices vary by manufacturer, format, and compatibility. Therefore, we cannot guarantee that this unit will support all USB devices from every brand.

Removing a USB Device (To safely remove a USB device:

- Turn off the unit or switch to another mode (Phono, AUX, or Radio).
- Gently pull the USB device straight out of the USB port.
Do not remove the USB device while it is playing or recording, as this may damage the files or the device.

Bluetooth® IN (Receiver Mode)

Bluetooth IN allows you to play music from your phone or tablet through this unit's speakers.

To Connect Your Device

- Press the Mode button repeatedly until BT IN mode is selected.
- The BT indicator light will begin flashing.
- Turn on Bluetooth on your mobile device.
- Search for available devices and select: "RHRP-3000"
- Once connected, the BT indicator light will stay solid.
- Start playing music on your device.
You can now hear your music through the unit 's speakers.

AUDIOSTREAM™ (Bluetooth OUT / Transmitter Mode)

Audiostream™ allows you to send sound from this unit to a Bluetooth speaker or wireless headphones.

- Play a record and listen through Bluetooth speaker or wireless headphones.

To Connect to a Bluetooth Speaker or Headphones

1. Make sure the unit is powered on.
2. Press and hold the Mode button while in BT IN mode.
 - The BT indicator will flash rapidly.
 - The unit is now in Bluetooth OUT (Audiostream) pairing mode.
3. Turn on your external Bluetooth speaker or headphones and set them to pairing mode.
4. When connected, the BT indicator will flash slowly.
Audio from the unit will now play through your connected Bluetooth device.

To Cancel Bluetooth OUT Connection

- Press and hold the Mode button again to disconnect.

Headphone Jack & Line Out

Using the Headphone Jack

- Connect wired headphones to the 3.5mm headphone jack.
- Audio will play through the headphones.

Using the Line Out

- Use the Line Out jacks on the rear panel to connect the unit to:
 - An external amplifier
 - Powered speakers
 - A home audio systemThis allows you to use the Music Center as a source device for a larger sound system.

TROUBLESHOOTING GUIDE

If you experience a problem with the unit, please review the suggestions below before contacting customer support.

Function	Problem	Solution
General	No power	<ul style="list-style-type: none"> • Check that the power adapter is securely connected to the unit and the wall outlet. • Make sure the wall outlet is working. Test it by plugging in another device (such as a lamp). • If the outlet has a switch, make sure it is turned on.
	No sound	<ul style="list-style-type: none"> • Turn up the Volume knob. • Make sure the correct mode is selected. • Check that all cables (such as AUX IN) are fully inserted into the correct jacks.
	The sound has interference	<ul style="list-style-type: none"> • Move the unit away from TVs or other electronic devices. • Turn off nearby electronic devices to reduce interference.
Radio	Cannot receive stations / Weak signal	<ul style="list-style-type: none"> • Make sure you are in FM mode. • Tune carefully to the desired station. • Fully extend and reposition the FM antenna. • Turn off nearby TVs or electronics that may cause interference.
Record Player (Phono)	Record will not play	<ul style="list-style-type: none"> • Turn the Volume knob clockwise to increase volume. • Remove the stylus (needle) protector before use. • Make sure the correct speed (33 / 45 / 78 RPM) is selected. • If the stylus is worn out, replace it.
	Sound skips	<ul style="list-style-type: none"> • Place the unit on a stable, level surface. • Make sure the unit is level front-to-back and side-to-side. • Clean the record before playing. • Do not use scratched, warped, or damaged records.
Bluetooth®	Bluetooth will not connect or play	<ul style="list-style-type: none"> • Make sure Bluetooth is turned on on your device. • Confirm the device is paired correctly. • Turn Bluetooth off on your device, then turn it back on and reconnect. • Move the device closer to the unit. • Make sure the unit is not already connected to another Bluetooth device.
Aux-In	Sound is distorted	<ul style="list-style-type: none"> • Make sure the external device is playing. • Check that the AUX cable is fully inserted on both ends. • Make sure the cable is not damaged. • Increase the volume on both the external device and the unit.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION ON MODIFICATION

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate this equipment. Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly. Electric and electronic equipment is marked with the crossed-out trash can symbol, seen the right side. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste but should be disposed of separately. All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.



SUPPORT

We do our best to offer high quality products to our customers. If you experience any issues or problems with your product, please contact customer support as many issues can be quickly resolved.

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.victoraudio.com to get up to the minute news, alerts, and documentation for your device. Please contact RCA VICTOR Customer Support for assistance.

RCA VICTOR Technical Support

2320 E. 49th Street

Vernon, CA 90058

Email: support@victoraudio.com

Phone: (866) 411-6292

Made in China

This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. [RCA VICTOR and the RCA VICTOR Logo]/[VICTOR and the DOG & GRAMOPHONE Logo] are trademarks used under license by NAXA ELECTRONICS INC.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.