




QUICK SET UP GUIDE ROXBURY

8-in-1 Turntable Music Center with AudioStream™
RWRP-3000

BASIC SET UP OF THE RWRP-3000

1. Unpack the unit and remove all packaging materials.
2. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power adaptor into a 120V AC electrical outlet and the other end into the port at the back of the unit.
4. Extend the FM antenna.
5. Turn on the unit by rotating the Volume/Power knob clockwise until you hear a 'click' sound.

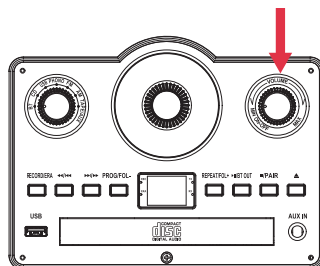


PREPARE TURNTABLE FOR PLAYING RECORDS

1. Remove the stylus protection cap.
2. Remove the twist tie that secures the Tone Arm.
3. Place a vinyl record on the turntable by aligning the Turntable Spindle to the hole in the record.
4. Press the Speed Selector to match the speed of the record.
5. Release the lever to engage the Tone Arm and begin playing the record.

CONNECT BLUETOOTH® IN

With the Bluetooth® IN function, you can play music from an external Bluetooth® device on the speakers of your RWRP-3000.


1. Set the Function Knob to the BT position. 'BT' will blink on the display.
2. Turn on your external Bluetooth device and pair it with the 'RWRP-3000' device.
3. When the Bluetooth connection is established, you will hear a short confirmation sound from the unit, and 'BT' will stop blinking on the display.
4. Start to play your favorite music on the connected device.

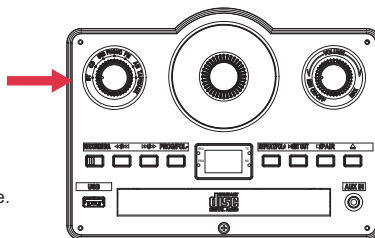

CONNECT BLUETOOTH® OUT

You can play music from your RWRP-3000 on external Bluetooth® speakers, soundbars, earbuds, or headphones.

1. Disable the Bluetooth® function on all nearby devices (e.g., amplifiers, soundbars, wireless headphones, smartphones, or tablets).
2. Play music in the CD, AUX, PHONO, USB, FM, AM, or Tape mode.
3. Press and hold the Play/Pause/BT OUT button to activate the Bluetooth Transmitter function. The TX indicator will start to blink in blue.
4. Power on your Bluetooth® device (e.g., speakers) and activate its Bluetooth pairing mode.
5. After a few seconds, the blinking TX indicator will turn solid blue, and you will hear a beeping sound to indicate that the turntable has been automatically connected.
6. To adjust the playback volume, rotate the unit volume knob or adjust the volume on your Bluetooth® device.
7. To turn off BT OUT mode, press and hold the Play/Pause/BT OUT button again. The TX indicator will be turned off.

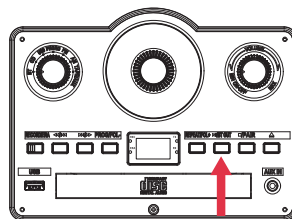

*This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC.

[RCA VICTOR and the RCA VICTOR Logo]/[VICTOR and the DOG & GRAMOPHONE Logo] are trademarks used under license by NAXA ELECTRONICS INC. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION