




QUICK SET UP GUIDE

WELLS 8-in-One Turntable Music Center with AudioStream™ RWRP-4000

BASIC SETUP OF THE RWRP-4000 TURNTABLE MUSIC CENTER:

 1. Determine the ideal location for the turntable. Unit should be placed on a sturdy surface away from any heat or water sources.
2. Connect the AC adaptor to a nearby power supply.
3. Unwind the FM antenna wire and extend to full length.
4. Tap the POWER/VOLUME knob to turn the unit on.

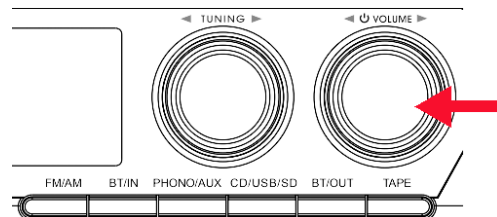


PREPARE TURNTABLE FOR PLAYING RECORDS

1. Remove cap protecting stylus.
2. Remove twist tie used to secure the Tone Arm in place.


CONNECT BLUETOOTH® IN

1. While playing audio on the RWRP-4000 device, press BT/IN button
2. Turn on the external device to receive Bluetooth® audio signals
3. Find the name of "RWRP-4000" and connect to the device
4. After the Bluetooth® device is connected successfully, the "BT" text on the RWRP-4000 LC display screen will change from flashing to steady on.

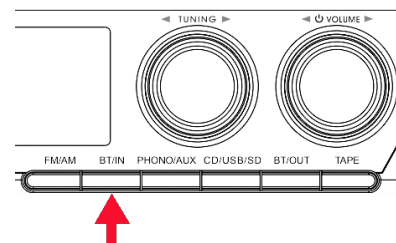

CONNECT AUDIOSTREAM™ (BLUETOOTH® OUT)

1. When the host plays the audio, press BT/OUT buttons.
2. Turn on the device to receive Bluetooth® audio signals
3. Then automatically connects to RWRP-4000 . (Note: some receiving devices need to click the link to receive the audio signal transmitted by VICTOR RWRP-4000)
4. After the Bluetooth® device is connected successfully, the emission indicator light on the host panel will change from shining to steady on.
5. Adjust the volume on your unit or your device to desired level

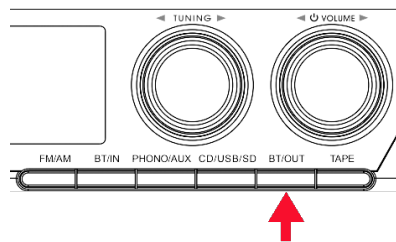

* This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC.

[RCA VICTOR and the RCA VICTOR Logo]/[VICTOR and the DOG & GRAMOPHONE Logo] are trademarks used under license by NAXA ELECTRONICS INC. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION