

Bluetooth® Speaker

Bonus Pack Includes Exclusive Metal Retro Lunch Box

VAS-3004

100Hz-20KHz · Speaker Frequency: Playable Media Format(s): MP3

Material

Output

Product size

· Bluetooth version

· FM Radio Frequency: 87MHz-108MHz

Wireless distance

· Battery capacity 600mAh Lithium-ion battery

About 2-3 hours * Play time Charging time About 1-2 hours

 Charging port USB Type C

USB/TF Card Slot. Long Lasting Battery, Lightweight · Product features & Portable Design, Built-in Phone Holder, Bluetooth

SPECIFICATIONS

ABS+Fabric

V5.0

3W*2

74*74*165mm

Connectivity, 1+1 Pairing, FM Radio (*Playtime will vary depending on volume level and type of media/content played)

PACKAGE CONTENTS

· Bluetooth® Speaker x 1

User Manual x 1

Metal Lunch Box x 1

· Warranty Card x 1

USB Type -C Charging Cable x 1

BUTTON CONTROL



Volume - / Previous Track Volume + / Next Track

- 3 Play/Pause

- 4 TWS Function & Light On/Off Built-in *Phone Stand

⑤ Mode Button(Switch FM/BT)

CHARGING

Charging method:

. Use the provided USB Type-C charging cable to connect to a power adapter or computer.

Charging indicator:

- · Red light stays on = Charging in progress
- · Red light turns off = Fully charged
- . Blue light blinking = Waiting for Bluetooth pairing
- . Blue light stay on = Bluetooth successfully connected

BLUETOOTH®

Pairing steps:

- · Turn on the Bluetooth speaker
- Turn to Bluetooth Mode and keep it closer to your phone or other device
- Turn on Bluetooth on your phone or other device and search for the device. Select the speaker model VAS-3004 to connect.

OPERATIONS

After connecting via Bluetooth, open the music player on your phone.

• Briefly Press the volume "+/-" button to switch to the next/previous track.

Volume adjustment:

 Press and hold the volume "+/-" button to increase/decrease the sound volume

- Turn on two speakers and place them close to each other. Press and hold TWS Function button until you hear a sound, confirming the connection is successful.
- . To cancel the TWS function, press and hold the button until you hear a sound, indicating it has been disconnected.
 - . Briefly press the TWS button to turn the light on or off.

FM RADIO

- 1. Turn on the unit.
- 2. Press the "M" button until you hear the FM Radio input.
- 3. Press and hold the "@" button to search and save preset radio stations within the 87-108 MHz frequency range.
- 4. Briefly press the "+" or "-" buttons to listen to the next or previous preset
- 5. Press and hold the "+" or "-" buttons to increase or decrease the volume.

For improved FM radio reception, plug the included USB cable into the USB port while using the FM radio. The cable acts as an antenna and enhances reception of nearby FM stations.



USER MANUAL

Please read carefully before use and keep for future reference.

TROUBLESHOOT

Cannot connect to Bluetooth:

• Make sure the speaker is in pairing mode and within the valid connection range. **Poor sound quality:**

Check the volume setting and sound quality setting of the sound source device.

SAFETY INSTRUCTIONS

- 1. Read and Retain Instructions Read all safety and operating instructions before use and keep them for future reference.
- 2. Follow Warnings Follow all warnings on the product and in the user manual.
- Water and Moisture Do not use this device near water or moisture (e.g., near a sink, bathtub, swimming pool, or in a damp basement).
- 4. Cleaning Clean only with a soft, dry cloth. Do not use chemical cleaners.
- Ventilation and Placement Do not block any ventilation openings. Avoid placing the device on soft surfaces (like beds or couches) or covering it with Items such as cloths or paper. Keep it away from heat sources such as radiators, stoves, or direct sunlight.
- Power Source and Cord Safety (if applicable) If using a power adapter, ensure the cord is not pinched or walked on, especially at plugs or connection points. Unplug the speaker during lightning storms or when not in use for long periods.
- Accessories Only use attachments or accessories specified by the manufacturer.
- Service and Repairs Refer all servicing to qualified personnel. Do not attempt to repair or disassemble the device yourself.
- Moisture and Liquid Warning WARNING: To reduce the risk of fire or electric shock, do not expose the speaker to rain or moisture. Do not place containers with liquids (e.g., vases, cups) on or near the device.
- Climate Use Use the product only in moderate climates. Avoid exposure to extreme heat or cold.
- 11. Flame Hazard Do not place open flame sources (such as lit candles) on or near the device.
- 12. Battery Safety This product contains a built-in lithium battery. Do not discard in fire, expose to high temperatures, or attempt to puncture or disassemble.
- Hearing Protection To protect your hearing and extend the speaker's life, avoid listening at maximum volume for long periods.
- 14. Proper Disposal Dispose of the product and battery in accordance with local and national regulations. Recycle where facilities exist.

70mm

FCC NOTICE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmly interference, and (2) This device must accept any interference received, including interference that may cause undessired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator's your body. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica-tions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to by to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPORT

We do our best to offer high quality products to our customers. If you experience any issues or problems with your product, please contact customer support as many issues can be quickly resolved. If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.victoraudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact VICTOR Technical Support.

VICTOR Technical Support 2320 East 49th St. Vernon, CA 90058 Te: (866) 411-6292 Email: support@victoraudio.com

Made in China

This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC.
 VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC.

Further information at www.victoraudio.com.
All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

100mm