

AFTER CORRECTION



Cassette Bluetooth® Speaker VAS-3006




Instruction Manual

Please read carefully before use and keep for future reference.

Introduction

Thank you for choosing our Bluetooth Speaker as your source for entertainment! You can use this item with iPads, iPhones, iPods and many types of smartphone to stream music. To achieve the best results when using the device, please read this manual before first use.

Description

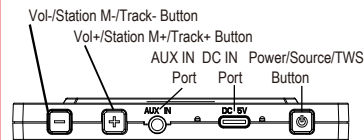

- Package Contents**
1. Bluetooth Speaker
 2. User Manual, Warranty Card
 3. USB Type C Cable

LED Status

Blue LED flashing & Blue LED solid	Bluetooth mode
Blue & Green LED	FM mode
Green LED	Aux mode
Red LED	Charging
Red LED off	Full charged
Red LED flashing	Low battery

Troubleshooting

Unit doesn't connect to device	Speaker needs to be connected/re-paired to device
A tone is heard every few seconds	Speaker needs to be charged
If the unit does not charge	Speaker needs to be charged Try a different cable and adaptor
Unit doesn't control track(s)/volume	Speaker needs to be in Bluetooth mode for full control
Unit distorts at high volume	The device's volume needs to be lowered

Care and Maintenance

Please read the following recommendations before using the Bluetooth speaker. By following them, you can have optimal performance and long-lasting enjoyment of the product.

- Do not expose the Bluetooth Speakers to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not professional.

Features

- Bluetooth v5.4 enables simple wireless pairing with your Bluetooth-enabled devices
- FM Radio
- USB Type C port for battery recharge
- 3.5mm standard auxiliary input provides a simple wired connection to wide variety of devices.
- Built-in rechargeable battery

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint, etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

Instruction For Use

Charging the Speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. please recharge the battery every time it drains out.

Attach the USB cable to the unit and plug into any USB charger. If the unit is completely discharged, it will take approximately 2 hours to fully charge at 5V/400mA.

The Red LED will illuminate during charging, when it has completed, the Red LED will turn off. When the battery is low, the Red LED will flash and the speaker will say "Low Battery."

Please charge it completely before the first-time use.

Specifications

Bluetooth® specification Bluetooth 5.4 (A2DP, HFP, AVRCP)

Bluetooth Range 33ft (10m) / 16ft (5m) TWS

Charging input voltage DC 5V : 400mA

Built-in Battery 3.7V/400mAh rechargeable lithium battery

Battery life & charging time may vary based on usage & types of devices used.

NOTE: This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Operation

- Press and hold the Power Button to power on the speaker.
- If a 3.5 mm Aux cable is connected to the unit, the Blue LED will turn off, and the Green LED will stay illuminated, notifying you, the unit is in Aux-in mode.
- Press and hold Power Button again to power Off the speaker.

Bluetooth Mode Pairing

The unit will go into "Pairing Mode" when the power is on. The blue light is flashing on the operational mode indicator and ready for pairing. Go into your Bluetooth device settings menu and look for "VICTOR VAS-3006" for pairing.

After the unit has paired and blue light become solid, it will re-connect automatically when the unit is powered on and the device is in range.

Note: Bluetooth®

To pair a new Bluetooth device, you must first disconnect the current connection from the source device such as a phone or tablet. Once disconnected, the speaker will become visible and ready for pairing with another device. Or simply turn off the speaker.

Begin Streaming Music

Use the controls on the connected Bluetooth device to select and begin playing audio. Turn the volume control of the unit to control music volume up or down.

Long press the Vol-/Station M-/Track- button or Vol+/Station M+/Track+ button to select the next or previous audio track.

FM Radio Mode

When the unit is ON, press the Power button activates FM Radio mode. The operational mode indicator changes to blue & green light. Press twice the Power button to scan all stations and save it. Long press the Vol-/Station M-/Track- or Vol+/Station M+/Track+ for the previous or next memory station. Press the Power button again to switch the speaker back to Bluetooth mode. **Note:** Please insert USB cable as antenna for better FM signal reception.

Aux-in Mode

Plug in the 3.5mm cable (not include) into the unit. The Other end is connected to your device. The speaker will automatically switch to Aux Mode. The green LED will be flashing when in "Aux" mode. Please note music and volume can be controlled by your device.

TWS Pairing (With another VAS-3006 speaker)

Connect:

1. Turn on the first speaker by pressing its power button.
2. Turn on one of the speakers and short press the power button twice.
3. The two units will connect to each other automatically.
4. You will hear a confirmation sound indicating they are paired.
5. Connect your device to the speakers via Bluetooth.

You can pair your device with the speaker either before or after pairing the two speakers together.

Note: The LED indicator will turn solid blue.

Disconnect

To disconnect the speakers from Twin Connected Mode, short press the power button twice on one of the connected speakers. Or simply turn off one of the speakers.

Support

We do our best to offer high quality products to our customers. If you experience any issues or problems with your product, please contact customer support as many issues can be quickly resolved.

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.victoraudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact VICTOR Technical Support.

VICTOR Technical Support
2320 East 49th Street
Vernon, CA 90058
Tel: (866) 411-6292
Email: support@victoraudio.com

* This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC.
Further information at www.victoraudio.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners

Made in China