



# QUICK SET UP GUIDE

## LAKESHORE


### VHRP-1100

#### 5-IN-1 Turntable System

### BASIC SETUP OF THE VHRP-1100:

#### Connect to Power Source

1. Insert the DC plug of the AC adapter cord into the DC INPUT Jack at the back of the turntable.
2. Plug the AC adapter into a normal power outlet.
3. Press the **POWER**  button to turn on the turntable and the POWER indicator will light up. To turn the turntable off; press the POWER button again and the POWER indicator will turn off.

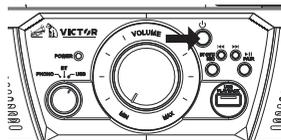


#### PREPARE TURNTABLE FOR PLAYING RECORDS

1. Remove cap protecting stylus.
2. Remove twist tie used to secure the Tone Arm in place.


#### CONNECT BLUETOOTH® IN

1. POWER on the unit, rotate the **SOURCE** selector to **BT** position. The Bluetooth indicator (inside in the POWER indicator) will flash.
2. To establish a new link, turn on the Bluetooth function of your Bluetooth enabled device and enable the search or scan feature to find "**VICTOR VHRP-1100**" in the list of discoverable Bluetooth devices.
3. Select the "**VICTOR VHRP-1100**" from your available device list when it appears on its screen and a brief welcome melody will be heard if pairing and connection is successful. If you are asked for a password, enter "0000".
4. When successfully paired and connected, a brief chime will be heard and the Bluetooth indicator will change to solid on.

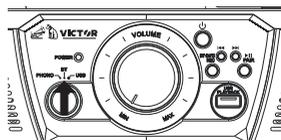

#### CONNECT BLUETOOTH® OUT

1. POWER on the unit, rotate the **SOURCE** selector to desired function mode except the BT (Bluetooth receiver) modes.
2. Press and hold the **BT OUT** button, unit is in Bluetooth® transmit pairing mode and Bluetooth indicator flashes Blue
3. Set your Bluetooth® receiver such as headphone or speaker to ON and begin searching for devices.
4. Turntable will auto scan and pair with your Bluetooth® receiver nearby, BT indicator will stop blinking to indicate a connection has been established.
5. Play music on Turntable in Phono or USB mode. You will no longer hear sound on the turntable speakers. Instead, music will be played on your connected Bluetooth® device.
6. Press and hold the BT OUT button when you finish listening in Bluetooth® transmitter mode, BT indicator will be off and unit speaker will sound again.

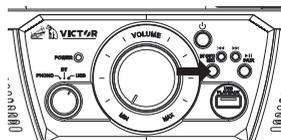

*"This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at [www.victor-brand.com](http://www.victor-brand.com). All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.*

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION