

 


## QUICK SET-UP GUIDE

**Monroe**  
8-in-1 Turntable  
**VWRP-3700**

### BASIC SET-UP OF THE VICTOR VWRP-3700

1. Unpack the unit and remove all packaging materials.
2. Carefully turn the unit over so that lid is resting on the floor, place it onto a soft surface to protect it from scratches. Screw the four legs onto the underside of the unit. Stand the unit on a flat, stable surface
3. Plug the power adaptor into a 100~240V AC electrical outlet and the other end into the port at the back of the unit.
4. Extend the FM antenna.
5. Turn on the unit by rotating the Volume/Power knob clockwise until you hear a 'click' sound.

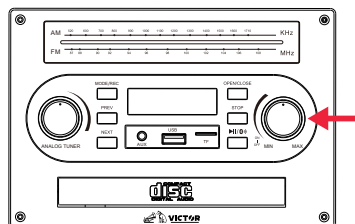


### PREPARE TURNTABLE FOR PLAYING RECORDS

1. Remove the stylus protection cap.
2. Remove the twist tie that secures the Tone Arm.
3. Place a vinyl record on the turntable by aligning the Turntable Spindle aligned with the hole in the record.
4. Slide the Speed Selector to match the speed of the record.
5. Release the lever to engage the Tone Arm and begin playing the record.

### CONNECT BLUETOOTH® IN

With the Bluetooth® IN function, you can play music from an external Bluetooth® device on the speakers of your VICTOR VWRP-3700.

 
1. Press the mode button to BT mode.
2. Turn on your external Bluetooth device and pair it with the 'VICTOR VWRP-3700' device.
3. Once connected, then you can start to play your favorite music on the connected device.

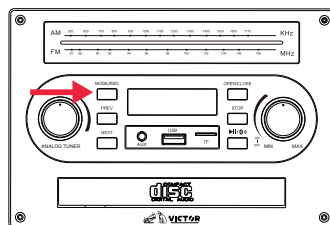

### CONNECT BLUETOOTH® OUT

You can play music from your VICTOR VWRP-3700 on external Bluetooth® speakers, soundbars, earbuds, or headphones.

 1. Disable the Bluetooth® function on all nearby devices (e.g., amplifiers, soundbars, wireless headphones, smartphones, or tablets).
2. Play music in the CD, AUX, Phono, USB, TF, FM, AM or Tape mode.
3. Press and hold the Play/Pause/BT OUT button to activate the Bluetooth Transmitter function.
4. Power on your Bluetooth® device (e.g., speakers) and activate its Bluetooth pairing mode.
5. After a few seconds, the turntable and external Bluetooth® device will automatically connect.
6. To adjust the playback volume, you can only adjust the volume on your Bluetooth® device.
7. To turn off BT OUT mode, long press the Play/Pause/BT OUT button again.

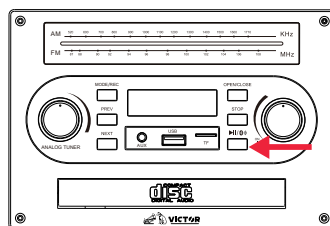

\* This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information can be found at [www.victoraudio.com](http://www.victoraudio.com). All other products, services, companies, trademarks, trade, or product names and logos referenced herein are the property of their respective owners.

**READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION**