



QUICK SET UP GUIDE


STATE

VWRP-3800

7-IN-1 Wood Music Center

BASIC SETUP OF THE VWRP-3800:

1. Unpack the unit and remove all packaging materials.
2. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power adaptor into the electrical outlet and connect other end to the back of the unit.
4. Extend the FM antennae before listening to the radio.
5. Turn the unit ON by pressing the **POWER** button.

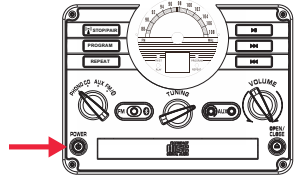


PREPARE TURNTABLE FOR PLAYING RECORDS

1. Remove cap protecting stylus.
2. Remove twist tie used to secure the Tone Arm in place.

CONNECT BLUETOOTH® IN

You can listen to an external Bluetooth® device on the VWRP-3800 built-in speakers.


1. Turn the unit ON by pressing the POWER button.
2. Set the FUNCTION KNOB to the FM/📶 position.
3. Select 📶 (Bluetooth) using the switch. The FM ST/BT indicator starts blink in blue.
4. Ensure that the Bluetooth function is activated in your player (e.g. mobile phone).
5. Pair your external Bluetooth® device with the "VICTOR VWRP-3800" shown in the list of devices. If prompted, please enter the password "0000" on your device.
6. A beep will be heard and the FM ST/BT indicator turns to solid blue, which indicate the Bluetooth connection is established.

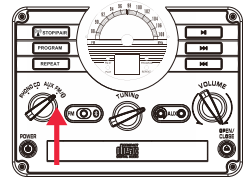

CONNECT BLUETOOTH® OUT

You can play music on the VWRP-3800 and listen to it on external Bluetooth® speakers, stereo, or headphones.

1. Disable the Bluetooth function on all devices nearby (e.g. amplifier, sound bar, wireless headphone, smart phone, iPad).
2. Play music while in CD, FM Radio, Phono, or AUX mode as described above.
3. Press and hold **STOP/PAIR** Button till the FM ST/BT indicator starts to blink in blue.
4. Power on your Bluetooth® device activate its Bluetooth function.
5. After a few seconds, your turntable will connect to your device and the FM ST/BT indicator turns to solid blue.

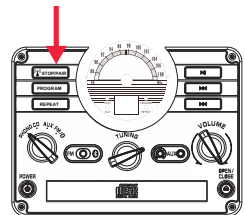

* This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at www.victor-brand.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION