



MONROE
VWRP-3700
8-IN-1 TURNTABLE



Instruction Manual

Please read carefully before use and keep for future reference

WARNING



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Wipe the media player with a soft, dry, lint-free cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.

11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. This equipment is intended for use in a moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with \sim indicates AC voltage.
20. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Do Not:

1. Immerse the media player in water or any other liquid.
2. Expose the media player to liquid, moisture or humidity; this will affect the unit's internal circuit.
3. Use any abrasive cleaning solvents to clean the music system.
4. Expose the media player to extremely high or low temperatures. This will shorten the lifespan of electronic devices, destroy the battery, and/or distort certain plastic parts.
5. Drop the media player.
6. Attempt to disassemble the media player.
7. Dispose of the media player in a fire; this will result in an explosion.

TABLE OF CONTENTS

GETTING STARTED.....	6
SPECIFICATIONS	6
ÚÚÚÖWÖNÁXÖÚXÖY È.....	7
SETUP & BASIC OPERATION.....	8
XÖÝŠARECORDÁÚÖÖÖ/WP.....	9
ÖÖÁÚÖÖÖ/WIN.....	10
CASSETTE TAPEÁÚÖÖÖ/WP.....	10
BLUETOOTH® ÚÖÖÖ/WP.....	11
AUXÁN ÚÖÖÖ/WP.....	11
USB ÚÜÁZÖÖÖÁÚÖÖÖ/WP.....	11
WÜÖÖPÖUÖÖÖ.....	1F
RADIOÁÚÖÖÖ/WP.....	1G
RÖÖÖWÁÚÖÖÖ/WP.....	1G
CARE & MAINTENANCE	13
HOW TO REPLACE THE STYLUS	15
TROUBLESHOOTING GUIDE	16
FCC NOTICE.....	17
CAUTION ON MODIFICATIONS	18
SUPPORT.....	18

GETTING STARTED

Getting Started

Remove the unit from the box.

Remove any packaging from the unit.

Place the packaging inside the box and either store or dispose of it safely.

Package Contents

Main Unit

UL Approved Adaptor

RCA Cable

45 RPM Adapter

4 Detachable Legs

4 Rubber Feet

Quick Setup Guide

Instruction Manual

Warranty Card

SPECIFICATIONS

Product Name	MONROE (8-in-1 Wood Music Center)
Turntable Speed	33 1/3, 45, 78 RPM
FM Frequency Range	87.5 - 108 MHz
AM Frequency Range	520 - 1710KHz
Bluetooth® Version	V5.0
Bluetooth® Transmission Distance	Up to 33 feet (10 Meters)*
Input	Aux In, USB, TF card
Output	Line Out
Built-in Speakers	3" x 2
Power Output	5W x 2
Power Source	AC/DC 100-240V 50-60Hz 12V 1A
Accessories Included	UL Approved Adaptor, RCA Cable, 45 RPM Adapter, 4 Detachable Legs, 4 Rubber Feet, Quick Setup Guide, Instruction Manual, & Warranty Card


** Distance may vary depending on any objects or interference between devices.*

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**


PRODUCT OVERVIEW

1. FM/AM frequency display window
2. Open/Close Button
3. Stop Button
4. On/Off/Volume Control Dial
5. Play / Pause/ BT Out Button; Short press to play/pause; Long press to BT Out mode
6. Mode/ Encoding Button; Short press to switch mode; Long press to USB Encoding
7. Skip-Button (PREV)
8. AM/FM Radio Control Dial
9. Skip+Button (NEXT)
10. Speakers
11. Disc Tray
12. LED Display
13. Aux-in port
14. USB Input Port
15. TF Card Input Port
16. RCA Output Ports
17. DC Input Socket
18. FM Antenna
19. Tape Eject / Fast Forward
20. Cassette
21. Turntable
22. 45 RPM adapter
23. Lever
24. Tone Arm
25. Auto Stop On/Off Switch
26. Speed Selector
27. Tone Arm Holder
28. Turntable Pickup


Front View

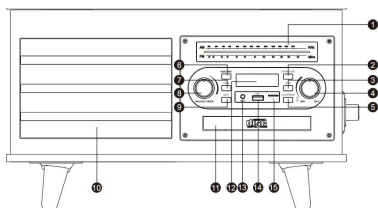


Back View

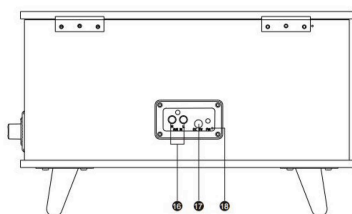

Side View

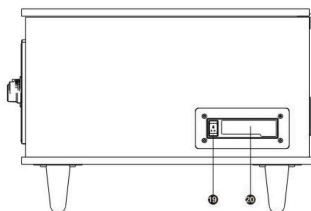

Turntable

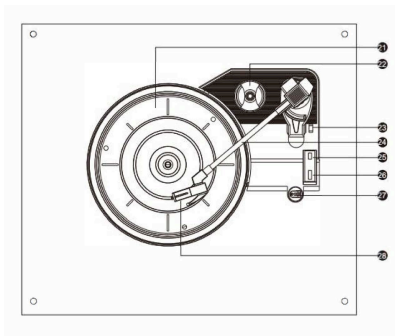

SETUP & BASIC OPERATION

Assembly

Carefully turn the Turntable over so that lid is resting on the floor, and place it on a soft surface to protect it from scratches.

Screw the four legs into the underside of the Turntable.

Stand the Turntable on a flat, stable surface.

Using the Monroe 8-in-1 Turntable

Plug the DC input jack of the power adapter into the DC input socket on the back of the Monroe 8-in-1 Turntable. Then, plug the adapter into the main power supply and switch it on. Turn on the music system by rotating the "On/Off/Volume Dial" in a clockwise direction until it clicks.

Short Press the "MODE/REC" button until your desired operation is selected (Bluetooth, CD, Turntable, FM, AM, Aux, USB, TAPE).

Long press the "MODE/REC" button to USB encoding. Rotate the AM/FM radio control dial in a clockwise direction to your desired radio mode.

Adjust volume by rotating the on/off/volume control dial. Rotate in a clock direction to increase the volume and rotate in an counterclockwise direction to decrease the volume.

To pause a track, short press the "PLAY/PAUSE/BT OUT" button while playing; push it again to resume the track.

Long press the "PLAY/PAUSE/BT OUT" button to turn on the BT transmitter.

Switch to next track by pressing "Next" button; play previous track by pressing "PREV" button. To open the Disc tray by pressing "OPEN/CLOSE" button, press "OPEN/CLOSE" button again to close Disc tray.

To stop CD play, press the "STOP" button.

To turn off the device, rotate the "On/Off/Volume Dial" in a counterclockwise direction until it clicks.

J-BM@F97 ORD'CD9F5 HCB

STEP 1: Turn on the Monroe 8-in 1 Turntable by rotating the "On/Off/Volume Dial" in a clockwise direction.

STEP 2: Short press the "MODE/REC" button to turntable mode.

STEP 3: Remove the protective white needle cover by gently sliding it away from the tone arm.

STEP 4: Carefully place a record onto the turntable. If listening to a 45 rpm record, remember to turn on the 45 rpm adapter first.

STEP 5: Unlock the tone arm from the arm lock by pushing it aside.

STEP 6: Raise the tone arm using the arm raising lever or by carefully lifting it .

STEP 7: Move the tone arm across to the outlet edge of the record and gently lower it; the turntable will begin to spin and play automatically.

STEP 8: Once the tone arm reaches the end of the record at the center of the turntable, the turntable will stop. Lift away the tone arm and place it back into the armrest.

STEP 9: Secure the tone arm once more by engaging the arm lock.

STEP 10: Rotate the "On/Off/Volume Dial" in a counterclockwise direction until it clicks to turn off the turntable.

Note: Always ensure that the tone arm is secured before transporting

CD OPERATION

Inserting a CD

STEP 1: To access the built-in CD player, eject the disc tray by pressing "OPEN/CLOSE" button.
STEP 2: Insert the CD with the artwork visible and facing up. Gently press the CD into the disk tray and close the CD player.

STEP 3: Short press the "MODE/REC " button to navigate to CD mode.

Warning: The CD player utilizes a Class 1 Laser. Always exit CD mode before opening the CD player to remove or change CDs. Never look directly at the laser pickup head.

Listening to a CD

STEP 1: Follow the instructions in the "Inserting a CD" section to insert a CD.

STEP 2: Control the sound by following the instructions in the "Using Monroe 8-in-1 Turntable" section.

STEP 3: To stop CD playback, press the "STOP" button.

CASSETTE TAPE OPERATION

STEP 1: Turn on the Monroe 8-in-1 Turntable by rotating the "On/Off/Volume Dial" in a clockwise direction.

STEP 2: Short press the "MODE/REC " button to navigate to TAPE mode.

STEP 3: Insert the Cassette tape into the Cassette Deck on the right side panel.

STEP 4: Turn the "On/Off/Volume Dial" to adjust the volume level.

Quick press the "Tape Eject/Fast Forward" button to fast forward.

Full press the "Tape Eject/Fast Forward" button inward to eject.

When the tape has finished playing, it will stop automatically.

BLUETOOTH® OPERATION

Bluetooth® Input

STEP 1: Turn on the Monroe 8-in-1 Turntable by rotating the "On/Off/ Volume Dial" in a clockwise direction; short press the "MODE/REC" button until Bluetooth® mode is selected.

STEP 2: Search for the Monroe 8-in-1 Turntable using a Bluetooth® compatible device. Select "VICTOR VWRP-3700" to connect and pair.

Note: Once connected, the sound can be controlled using the control panel or the relevant controls on the Bluetooth®-compatible device.

Bluetooth® Output

You can play music from this unit on external Bluetooth® speakers, soundbar, earbuds, or headphones.

STEP 1: Set the unit to CD, AUX, Phono, USB, TF, FM, AM or Tape mode.

STEP 2: Long press "PLAY/PAUSE/BT OUT" button to activate Bluetooth® Transmitter function.

STEP 3: Power on your external Bluetooth® device and activate its Bluetooth® pairing mode.

STEP 4: After a few seconds, the unit will automatically connect with external Bluetooth® device.

STEP 5: To turn off BT OUT mode, press and hold "PLAY/PAUSE/BT OUT" button.

AUX IN OPERATION

STEP 1: To use Aux mode, connect one end of Aux-in cable to the Aux-in jack and the other end to an external audio source device.

STEP 2: Short press the "MODE/REC" button to select Aux mode.

Note: Once connected, the sound can be controlled using the relevant controls on the compatible audio device.

USB OPERATION

STEP 1: To use USB mode, insert a compatible USB drive or TF card (not included) into the USB or TF card port on the front of the unit.

STEP 2: Short press the "MODE/REC" button to USB mode.

Note: Once connected, the sound can be controlled using the Monroe 8-in-1 Turntable. The Monroe 8-in-1 Turntable will only recognize MP3 audio files; if other files types are present on the USB drive, this may prevent the Monroe 8-in-1 Turntable from playing.

USB ENCODING

STEP 1: Set the unit to Phono, CD, FM, AM, Aux or Cassette mode.

STEP 2: Insert USB to USB port.

STEP 3: Long press "MODE/REC" button enter into USB encoding, then you can encode the music you like.

STEP 4: When you want to finish USB encoding, long press the "MODE/REC" button.

Note: The USB encoding can not encode in Bluetooth mode.

RADIO OPERATION

STEP 1: Extend the antenna for the best possible reception.

STEP 2: Short press the "MODE/REC" button to select your desired radio mode (AM/FM).

STEP 3: Select the desired station by rotating the analog tuner.

R7 A'OI H OPERATION

STEP 1: To listen through RCA out, connect the RCA cable to RCA out ports, ensuring that each plug is correctly inserted according to the corresponding color (red and white) on the RCA port of the media player and on the other end to an external amplifier.

STEP 2: Then you can enjoy the music you want.

CARE & MAINTENANCE

Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft dry cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzene or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

Beware of condensation

When the unit (or a record/disc) is moved from a cold to warm place, or used after a sudden temperature change, condensation may form; vapor in the air could condense on the internal mechanism, making correct operation erratic or impossible. To prevent this, or if this occurs, leave the unit turned off for one or two hours. The unit will stabilize at the temperature of its surroundings.

Using Compact Discs

Discs which can be played on this unit:

- Conventional audio CD
- Properly finalized CD-R and CD-RW discs
- Always place the disc on the disc tray with the label side up. (Compact discs can be played or recorded only on one side.)
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges. Should the disc become dirty, wipe the surface radially (from the center hole outward towards the outer edge) with a soft, dry cloth.



How to remove the disc



How to hold the disc



How to clean the disc

- Never use such chemicals as record sprays, antistatic sprays or fluid, benzene or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."
- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.
- Do not play any disc that is warped, deformed or damaged. Playing such discs may cause irreparable harm to the playing mechanisms.
- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will fall on them, and away from sources of heat such as radiators or heat-generating electrical devices.
- Printable CD-R and CD-RW discs are not recommended, as the label side might be sticky and damage the unit.
- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.
- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.
- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.
- Do not use CDs with an irregular shape (octagonal, heart shaped, business card size, etc.). CDs of this sort can damage the unit:




- If you are in any doubt as to the care and handling of a CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

CARE & MAINTENANCE

Using Cassette Tapes

Tape Handling:

- Use your finger or a pencil to turn the cassette tape's hub and take up any slack tape.
- Avoid touching the tape. Fingerprints attract dust and dirt.
- Avoid dropping or subjecting cassettes to excessive shocks.
- As C-120 tapes are physically weak and could become entangled in the transport mechanism, do not use them.

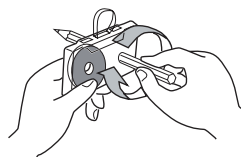

Do not store tapes in the following places:


- On top of heaters, exposed to direct sunlight or in any other places with high temperatures.
- Near speakers, on TV sets or amplifiers or where they would be exposed to strong magnetic fields.
- Where humidity is high or in dirty, dusty places.

Head Maintenance

The head and tape path should be cleaned and demagnetized periodically. Please use a cassette type head cleaning tape and demagnetizer. For specific details on the proper use of either item, please read each item's instruction manual.

Maintaining Vinyl Records

- Do not touch the record's grooves. Only handle records by edges or label.
- Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.
- Keep your records away from dust. Store in a cool, dry place.
- Keep records in sleeves and jackets when not in use to avoid dust and scratches.
- Store records upright on edges. Records stored horizontally will bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp records.
- Do not store records in the trunk of a car.
- Store records in an area with a stable temperature and low humidity.
- Should the record become dirty, gently wipe surface in a circular motion, using a soft anti-static cloth.

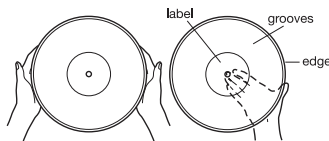

HOW TO REPLACE THE STYLUS

How to Replace the Stylus


The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records. The higher speed of 78 RPM records can wear the stylus more quickly .

Caution:

- Do not bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable to malfunction.
- Do not expose stylus to extreme heat.
- Contact a qualified repair company if you experience difficulty in changing the stylus.


Removing an Old Stylus

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".
2. Pull the stylus out toward direction "B".

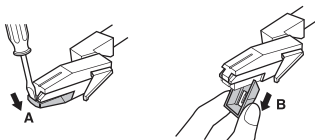

Installing a New Stylus

1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.

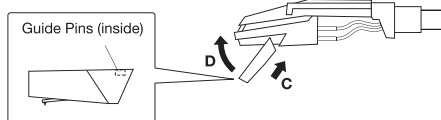

TROUBLESHOOTING GUIDE

In case of trouble with the unit, please look through the problems below and see if you can solve them yourself before calling your dealer.

Function	Problem	Solution
General	No power	<ul style="list-style-type: none"> Check the connection to the AC power source. Make sure the outlet is switched on. Test the outlet with another device (e.g., lamp or fan).
	No sound	<ul style="list-style-type: none"> Adjust the volume Connect the AUX IN cables into the correct jack.
	The sound has interference	<ul style="list-style-type: none"> The unit is too close to a TV set or similar appliance. Relocate the unit further away from them or turn the other appliances off.
Radio	Cannot listen to any station or signal is weak	<ul style="list-style-type: none"> Tune in the station properly. If a TV is near the unit, turn it off. Rotate the unit or antenna wire for the best reception position.
Record Player	Will not play	<ul style="list-style-type: none"> Turn the VOLUME KNOB clockwise. Loosen the screw and detach the stylus guard. The stylus guard is a white plastic cover that protects the stylus during transportation. Failing to remove this guard will not allow the needle to contact the grooves of the record and no sound will be heard! If the stylus is worn-out, change the stylus. Select the correct playback speed.
	Sound skips	<ul style="list-style-type: none"> Place the unit on a stable surface to avoid vibration and shock. Make sure the unit is level both front to back and side to side. Clean the surface of the record/disc. Do not use scratched, damaged or warped records/discs.
CD Player	Will not play	<ul style="list-style-type: none"> Turn the VOLUME knob clockwise and rotate the FUNCTION KNOB to "CD". Load a disc with the playback side facing down. If the disc is dirty, clean the surface of the disc. A blank disc has been loaded. Load a pre-recorded disc. Depending on the disc, it may not be possible to play back CD-R/CD-RW discs. Try again with another disc. You cannot play back unfinalized CD-R/CD-RW discs. Finalize and try again.
Bluetooth®	Will not play	<ul style="list-style-type: none"> Device is NOT paired properly; turn OFF Bluetooth, turn ON Bluetooth and repair device.
Cassette Player	Button does not work	<ul style="list-style-type: none"> Insert the cassette tape securely.
	Sound is distorted	<ul style="list-style-type: none"> Clean and demagnetize the heads. Use normal tape.
AUX In	No Sound	<ul style="list-style-type: none"> Ensure external player works when not connected via AUX cable. Ensure AUX In cables are securely connected and not damaged. Increase the volume level.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be colocated or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate this equipment. Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly. Electric and electronic equipment is marked with the crossed-out trash can symbol, seen the right side. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste but should be disposed of separately. All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.



SUPPORT

We do our best to offer high quality products to our customers. If you experience any issues with your product, please contact customer support as many issues can be quickly resolved.

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.victoraudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact VICTOR Technical Support.

VICTOR Technical Support

2320 East 49th St.
Vernon, CA 90058
(866) 411-6292

Email: support@victoraudio.com

Made in China

** This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC.*

VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC.

Further information at www.victor-brand.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners

