



QUICK SET UP GUIDE


MILWAUKEE

Desktop CD Stereo System

VDTS-4450

BASIC SETUP OF THE VDTS-4450:


1. Plug the small end of the power cord into the POWER Input on the back of the unit and the large plug into a standard wall power outlet.
2. Press the STANDBY button on the unit or remote control to turn the unit ON.
3. Press the STANDBY button again on the unit or remote control to turn the unit OFF.

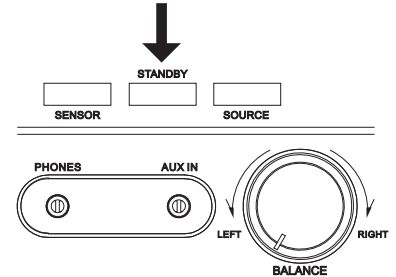

Connecting the External Speakers


The speaker output sockets are located at the back of the main unit. Speaker input sockets are located at the back of the speaker box.

1. Unwrap the included speaker cord, plug one end into the left (L) speaker box, and plug the other end into the left (L) speaker socket on the main unit.
2. Unwrap the included speaker cord and plug one end into the right (R) speaker box and the other end into the right (R) speaker socket on the main unit.
3. Ensure the speaker cords are not run in areas that could cause danger.

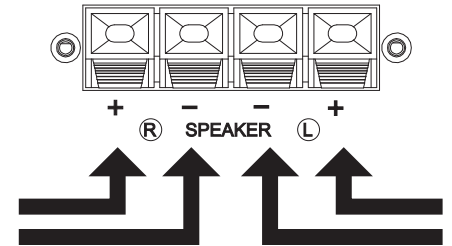

CONNECT BLUETOOTH®

1. Press the SOURCE button until the Bluetooth® indicator shows on the LCD Display with a blink or press the BT button on the remote.
2. Set the Bluetooth® function of your external device to **ON** and begin searching for devices. *Note:* The effective distance between your external device and this apparatus is 10 meters (33 feet).
3. Once **"VICTOR VDTS-4450"** appears on the paired devices list of your external device, select it.
4. If you are asked for a password, enter **"0000"**.
5. A tone will be heard, and the Bluetooth® indicator light steadily indicates an established connection.
6. A few seconds later, your Bluetooth® connection should be ready.
7. If you want the Stereo System changed to pair with another Bluetooth® device, press and hold the PAIR button, and the Bluetooth® indicator will flash on the LCD Display. The unit will go into pairing mode.

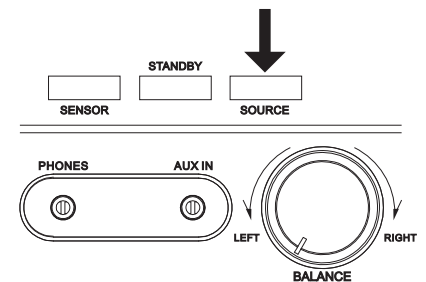

**This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at www.victor-brand.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.*

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION





GUIA RAPIDA DE AJUSTES

MILWAUKEE

Sistema de Disco Compacto Estéreo de Escritorio

VDTS-4450



AJUSTES BASICOS:

1. Conectar la salida del adaptador ca/cc al conector de entrada de Vcc "DC IN" de la unidad principal, entonces conectar el adaptador ca/cc a un tomacorriente cercano y de fácil acceso.
2. Presionar **STANDBY** o  en la unidad o control remoto para Encender la unidad.
3. Presionar **STANDBY** o  en la unidad o control remoto nuevamente para Apagar la unidad.





Conexión de las bocinas externas

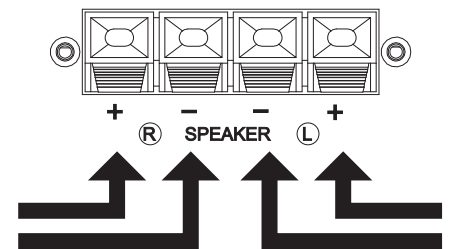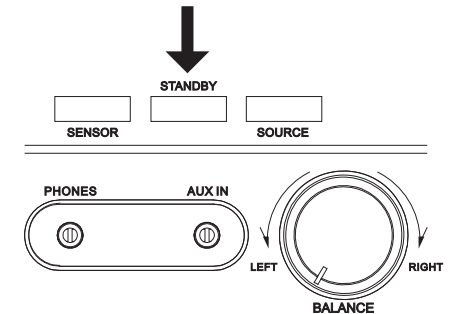
Los conectores de entrada para las bocinas se encuentran en la parte posterior de la unidad principal.

1. Desenrollar el cable de la bocina izquierda e insertarlo en los conectores "SPEAKER L".
2. Desenrollar el cable de la bocina derecha e insertarlo en los conectores "SPEAKER R".
3. Asegurarse que los cables de las bocinas no pasen por zonas donde puedan causar peligro.



SINCRONIA BLUETOOTH®

1. Presionar **SOURCE** en la unidad hasta que el indicador  empiece a destellar en la pantalla o presionar **BT** en el control remoto.
2. Activar la búsqueda de dispositivos Bluetooth® en el dispositivo Bluetooth® externo.
Nota: El rango de operación efectivo entre la unidad y el dispositivo Bluetooth® es de 10 metros.
3. En la lista de dispositivos desplegados, seleccionar **VICTOR VDTS-4450** para sincronizarlos.
4. En caso de ser requerida una contraseña, ingresar "0000".
5. Se emitirá un sonido de notificación y el indicador  permanece encendido indicando que la sincronía fue exitosa.
6. Unos segundos después la conexión Bluetooth® está lista para operarse.
7. Si desea sincronizar la unidad con otro dispositivo Bluetooth®, presionar y sostener  / **PAIR**, el indicador  empieza a destellar en la pantalla indicando que la unidad está en modo de sincronía.

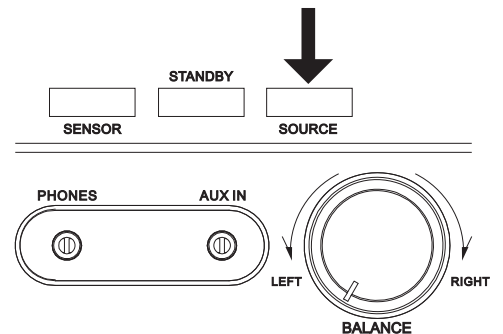

Este producto es fabricado y vendido bajo la responsabilidad de NAXA ELECTRONICS INC.

Los logotipos de VICTOR y el Perro con el Fonógrafo son marcas registradas usadas bajo licencia por NAXA ELECTRONICS INC. Para más información en www.victor-brand.com

Todos los demás productos, servicios, empresas, marcas registradas, nombres comerciales o de productos y logotipos a los que se hace referencia en este documento son propiedad de sus respectivos dueños.

LEER EL MANUAL DE OPERACION PARA ENTENDER POR COMPLETO LA OPERACION DEL PRODUCTO